


ECA Harness Removal

1. Using a small pick tool, carefully release the connector's hinged latch:



2. The terminals then have a 2-step release. Step 1, insert a de-pinning tool 11030043YT2 (or paperclip) into the connector's de-pinning slot. This slot is just above where the terminals sit:

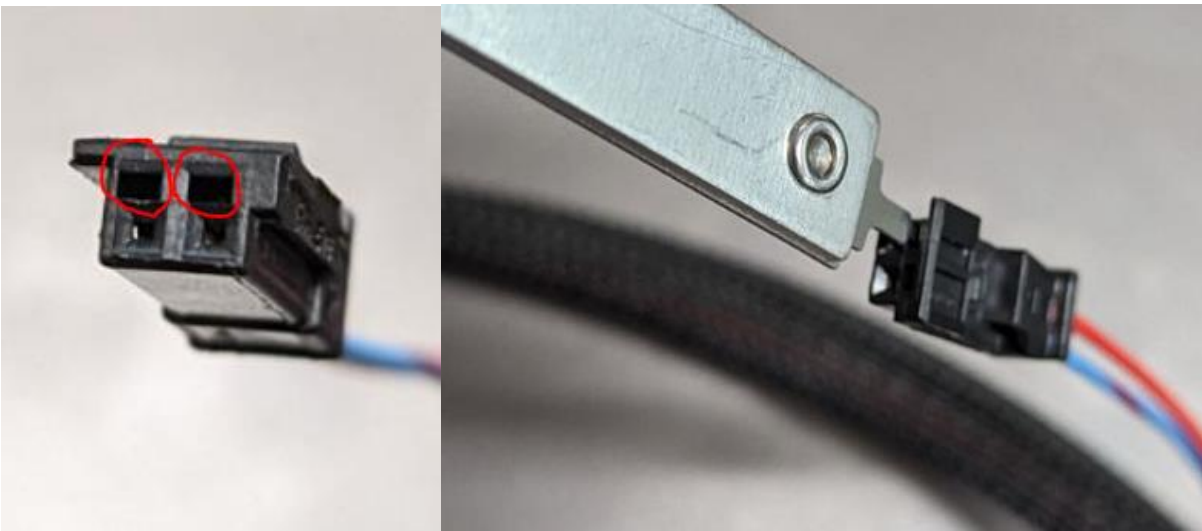

This will allow the terminals to be pulled out halfway.

3. With the terminals pulled out halfway, you can now press the final release tab down and pull each terminal out. Press the release tab with a pick tool as show below. Please also see the photo to show you the release tab that you should be pressing on. This takes VERY light pressure to release, nothing should be forced.

